



## Making Custom Labels in CSV and Importing

Should you wish to create custom labels on a PC and import them into the TestPro Labelling Schemes, the list can be created in Excel and other spreadsheet programs and imported.


The instructions which follow are for Excel. Please refer to instructions of other spreadsheet programs for file creation details, the import process would be the same.

### Creating a Custom Autotest Label series as CSV and importing


1. Launch Microsoft Excel and type the labels you wish to create in column A.

	A	B	C
1	BI3-C01-R01-P01		
2	BI3-C01-R01-P02		
3	BI3-C01-R01-P03		
4	BI3-C01-R01-P04		
5	BI3-C01-R01-P05		
6	BI3-C01-R01-P06		
7	BI3-C01-R01-P07		
8	BI3-C01-R01-P08		
9	BI3-C01-R01-P09		
10	BI3-C01-R01-P10		
11	BI3-C01-R01-P11		
12	BI3-C01-R01-P12		
13	BI3-C01-R01-P13		
14	BI3-C01-R01-P14		
15	BI3-C01-R01-P15		


2. Click File > Save As > File name: (enter any name) and Save as type: CSV (MS-DOS) (\*.csv) and choose save location

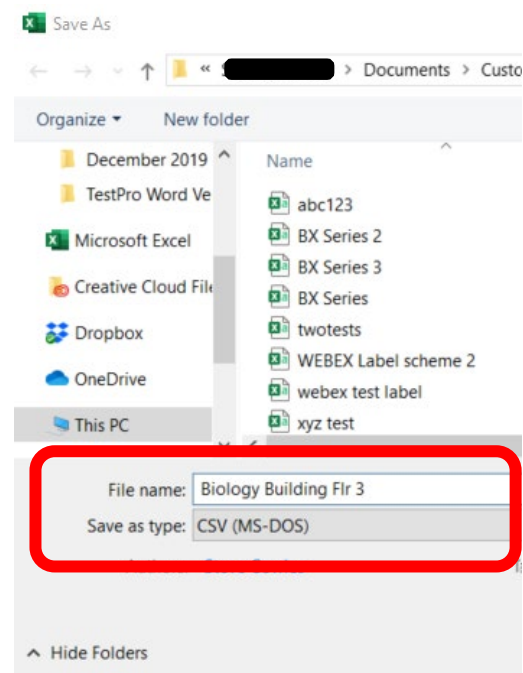


3. Insert a USB drive into the PC. Open the TestDataPro software and select Tools tab

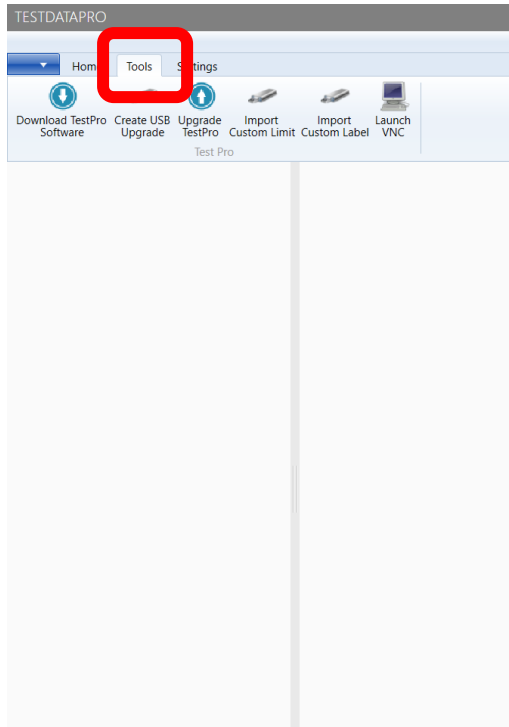




5. Navigate to the folder where the .csv file is saved and select it and click "Open"

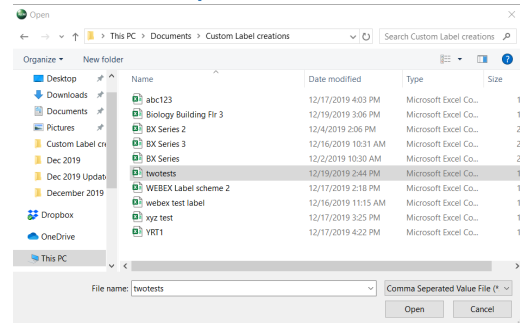


6. Click the dropdown arrow and select the USB drive letter then click OK, Click Ok in the message indicating label created

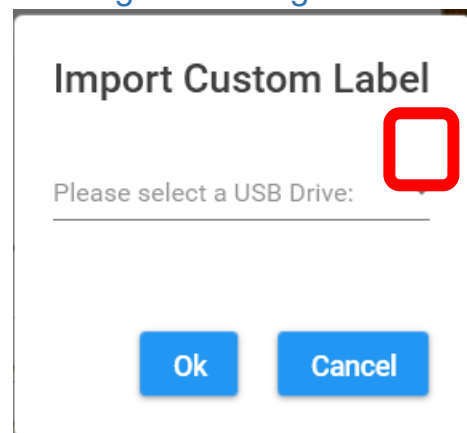

4. Click Import Custom Label

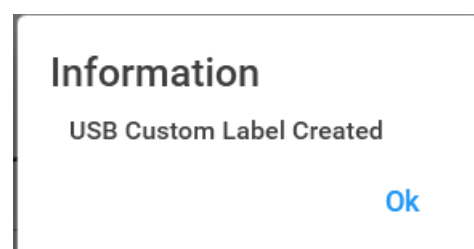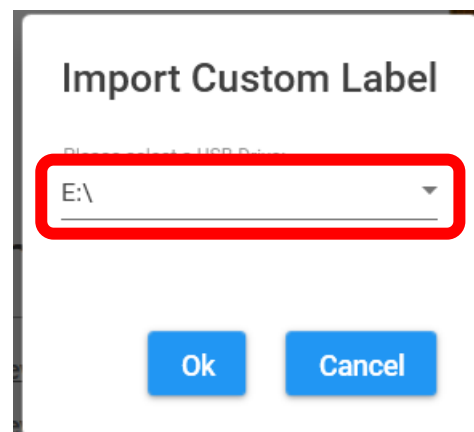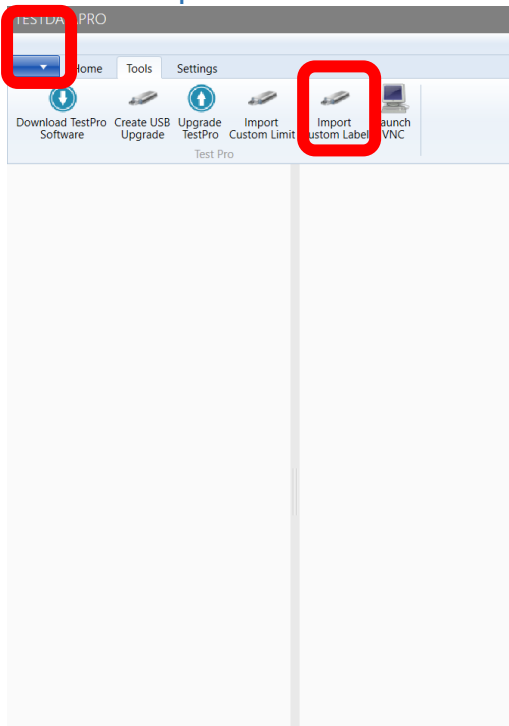

7. Remove USB drive and insert into side of powered up TestPro and select Import Label List

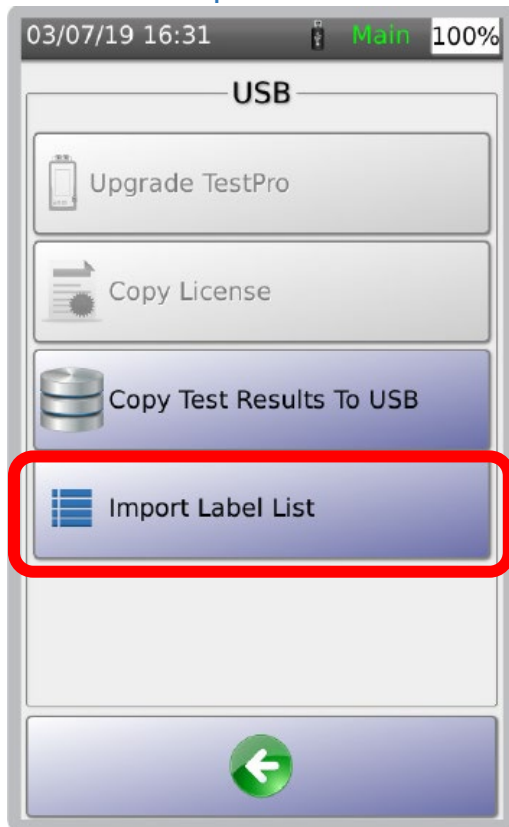

8. Successfully imported message will come up, click the green check mark, remove USB

